

PSE_INITIAL_VALUE: This value is derived from class_num_events (33.2.4.4) and mr_pd_class_detected (33.2.4.6) variables described in the PSE state diagram (Figure 33-1) as follows:

class_num_events	mr_pd_class_detected	PSE_INITIAL_VALUE
1	0	130
1	1	39
1	2	65
1	3	130
1	4	130 or 255
2	0	130
2	1	39
2	2	65
2	3	130
2	4	255

PD_INITIAL_VALUE: This value is derived from pse_power_type (33.3.3.3) and pd_max_power (33.3.3.3) variables described in the PD state diagram (Figure 33-4) as follows:

pse_power_type	pd_max_power	PD_INITIAL_VALUE
1	0	130
1	1	39
1	2	65
1	3	130
1	4	130
2	0	130
2	1	39
2	2	65
2	3	130
2	4	255